


LIGHT CONTROL RHEOSTAT

COMPONENTS

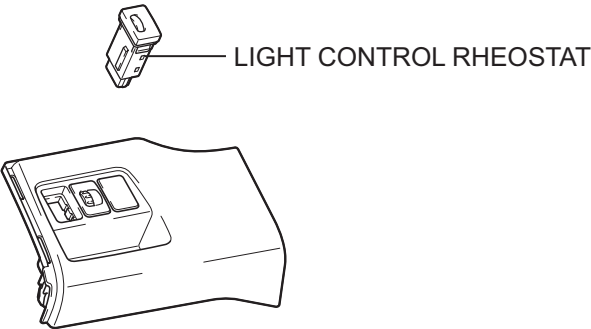

B135788E01

REMOVAL

1. REMOVE LIGHT CONTROL RHEOSTAT
- (a) Detach the 2 claws.
 - (b) Disconnect the connector and remove the switch.


INSPECTION

1. INSPECT LIGHT CONTROL RHEOSTAT
- (a) Remove the light control rheostat.
 - (b) Measure the resistance of the rheostat.

Standard resistance

Tester Connection	Rheostat Position	Specified Connection
1 (E) - 3 (RV)	Max	8 to 12 Ω
1 (E) - 3 (RV)	Mid	4.7 kΩ
1 (E) - 3 (RV)	Min	0 to 50 Ω

If result is not as specified, replace the rheostat.

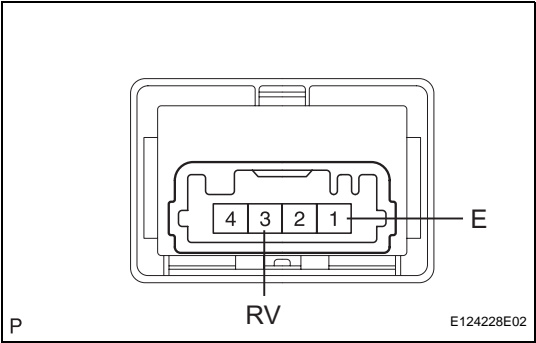

INSTALLATION

1. **INSTALL LIGHT CONTROL RHEOSTAT**
 - (a) Connect the connector.
 - (b) Attach the 2 claws to install the switch.